

# DuroFoam® Insulation

## INSULATING INTERIOR BASEMENT WALLS



See step-by-step  
instructions on reverse.

Also see application  
for basement slab  
insulation



### Features & Benefits

- Meets all building code requirements
- Meets CAN/ULC-S701, Type 1
- Long term RSI 0.65/25 mm  
(R-value 3.75/inch)
- Compressive Resistance: 10 psi
- Closed cell insulation resists moisture
- CCMC 12424-L
- Custom sizes available

### Energy Tip

Continuous insulation applied over the interior surface of basement walls eliminates thermal bridges and ensures the wood frame wall cavity will remain warmer.


# DuroFoam® Insulation

## INSULATING INTERIOR BASEMENT WALLS



Follow these simple How-to steps to install your DuroFoam insulation to have an insulated and comfortable basement.

MILLIMETERS	RSI	INCHES	R-VALUE
19	0.49	¾"	2.81
25	0.65	1"	3.75
38	0.99	1½"	5.63
50	1.30	2"	7.50
75	1.95	3"	11.25

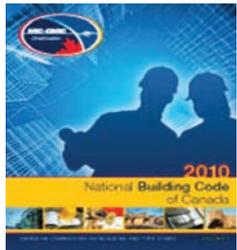

- 1. Follow the building code.**  
Be sure to follow the building code requirements applicable in your region.

The wall surfaces must be clean, dry and free of foreign materials and sharp projections.



- 4. Frame the Wall.**  
Construct a wood framed wall to be installed in front of the insulated basement wall to support the 1/2" thick gypsum board. The vertical framing members should be at least 2'x2' spaced at 16" or 24" on centres.



- 2. Start From a Corner.**  
DuroFoam insulation can be installed direct to the basement wall without the need for a separate moisture protection (see Plasti-Fab PIB 275). Starting from a corner, attach insulation boards to the basement wall using an adhesive compatible with expanded polystyrene (EPS) insulation.



- 5. Install the Wall.**  
Fasten the framed wall to the upper floor joist and basement floor leaving a small gap between the insulation and the back of the framed wall. Electrical wiring can be placed by running it in the small gap behind the framing. Use shallow electrical boxes.



- 3. Measure and Cut.**  
Measure and cut insulation board with a utility knife or fine tooth hand saw such as a keyhole type or drywall saw to fit openings such as windows. Insulation boards should be tightly butted together.  
\* The green face of DuroFoam insulation should face inward to make use of the markings on this face provided for easy cutting and spacing of interior framing as required.



- 6. Attach Gypsum.**  
Attach 1/2" thick gypsum board to the face of the framed wall.

### Vapour Barrier.

DuroFoam insulation used as the sole thermal insulation does not require a separate vapour barrier to control condensation within the assembly.

- Canadian code recognizes that when low-permeance insulation is the sole thermal insulation in a building assembly the temperature of the inner surface of the low-permeance insulation will be close to the interior room temperature.



Watch the How-To video on our YouTube Channel  
Search: Plasti-Fab

**1-88-THINK-EPS®**  
**1-888-446-5377**

View how-to videos, project profiles & testimonials @ [www.plastifab.com](http://www.plastifab.com)

Follow us on twitter: @PlastiFab  
Subscribe to our blog: [Plastifab.Wordpress.com](http://Plastifab.Wordpress.com)



Copyright © 2013 by Plasti-Fab Ltd. All rights reserved.  
Plasti-Fab & DuroFoam are registered trademarks of Plasti-Fab Ltd.

